Download the App

https://bit.ly/oilapp   https://bit.ly/oaplay

Download the Oil Analysis app from the App Store or Google Play. After installation, use your WebCheck credentials to login to the app.

Take your oil samples

1

Remove the sample label from the sample form and stick to the sample bottle.

2

Take the oil sample as you normally would and re-cap the sample bottle.

3

Ensure that the cap is securely tightened and wipe any excess oil from the sample bottle.

Complete sample submission with the asset tag booklet & the app

4

Using the app, scan the QR code of the machine the sample was taken from. Remove the tracking label from the sample form and stick to the asset log booklet.

5

Next, scan the sample label, and complete the sample information and submit the sample.

1

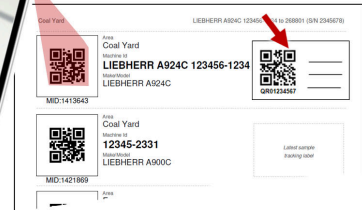Login to the app using your WebCheck credentials. The app will cache your machines.

2

Once logged in, click on the "Scan QR Code" button.

3

Locate the machine that was sampled in the asset tag booklet and scan that QR code. Stick the tracking label on your booklet.

4

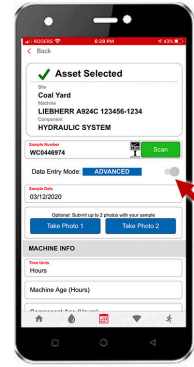From the list of components slide left on the component and click "+ Sample".

5

The comopnent is selected & sample submission screen is loaded. Click the "Scan" button.

6

Scan the sample bottle label from your oil sample for the selected machine and component.

7

The sample is now linked to the machine and component. Use the "ADVANCED" data entry mode to add info.

8

Complete the sample info, take any pictures you want, add a comment if desired, then click the "submit sample" button

9

The sample info has been submitted to the laboratory where the QR code will be scanned, and the sample information automatically retrieved.
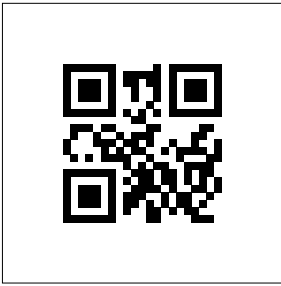

10

Submitted samples are listed. To update a samples info slide left. To delete a sample slide right.

11

Click "< Back " at the top of the previous screen to return to the component list so you can enter more samples for this machine.

Machine Id

Dually

Make/Model

FORD F450

MID:3295782

*Latest sample
tracking label*