

Download the App



<https://bit.ly/oilapp>



<https://bit.ly/oaplay>

Download the Oil Analysis app from the App Store or Google Play. After installation, use your WebCheck credentials to login to the app.

Take your oil samples



1

Remove the sample label from the sample form and stick to the sample bottle.



2

Take the oil sample as you normally would and re-cap the sample bottle.



3

Ensure that the cap is securely tightened and wipe any excess oil from the sample bottle.

Complete sample submission with the asset tag booklet & the app



4

Using the app, scan the QR code of the machine the sample was taken from. Remove the tracking label from the sample form and stick to the asset log booklet.



5

Next, scan the sample label, and complete the sample information and submit the sample.



1

Login to the app using your WebCheck credentials. The app will cache your machines.




2

Once logged in, click on the "Scan QR Code" button.




3

Locate the machine that was sampled in the asset tag booklet and scan that QR code. Stick the tracking label on your booklet.

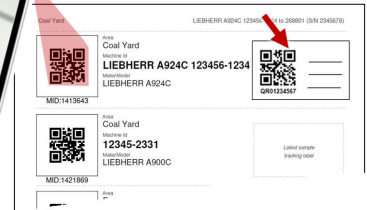

4

From the list of components slide left on the component and click "+ Sample".

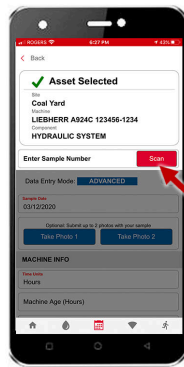


5

The component is selected & sample submission screen is loaded. Click the "Scan" button.



6

Scan the sample bottle label from your oil sample for the selected machine and component.

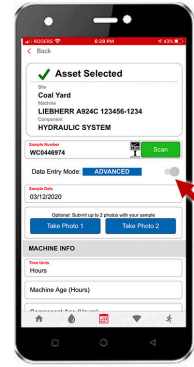


7

The sample is now linked to the machine and component. Use the "ADVANCED" data entry mode to add info.



8

Complete the sample info, take any pictures you want, add a comment if desired, then click the "submit sample" button

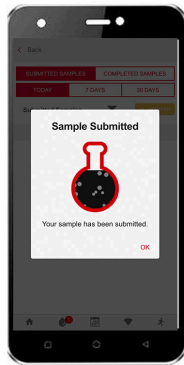

9

The sample info has been submitted to the laboratory where the QR code will be scanned, and the sample information automatically retrieved.




10

Submitted samples are listed. To update a samples info slide left. To delete a sample slide right.



11


Click "< Back " at the top of the previous screen to return to the component list so you can enter more samples for this machine.

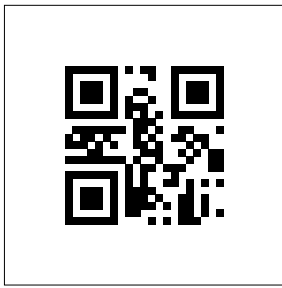

Machine ID
T1007
Make/Model
Peterbilt 386




MID:3436659

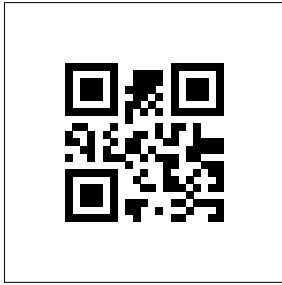

Machine ID
T1012
Make/Model
Peterbilt 386




MID:3413979

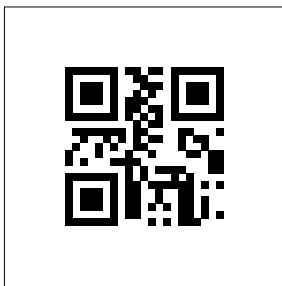

Machine ID
T1046
Make/Model
Peterbilt 386




MID:3413980

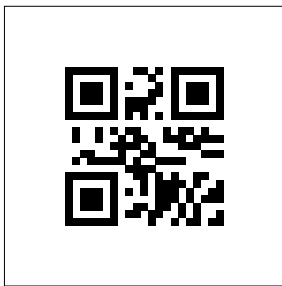

Machine ID
T1369
Make/Model
KENWORTH T800




MID:3413982

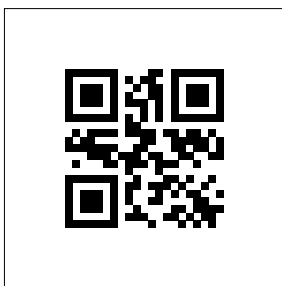

Machine ID
T1501
Make/Model
FREIGHTLINER CD122084SD



MID:3436662

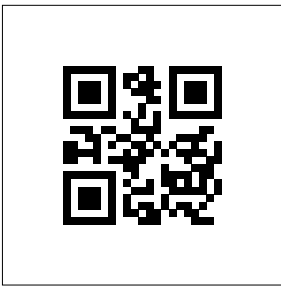

MID:3436664

Machine ID


T1503

Make/Model

FREIGHTLINER CD122084SD



*Latest sample
tracking label*

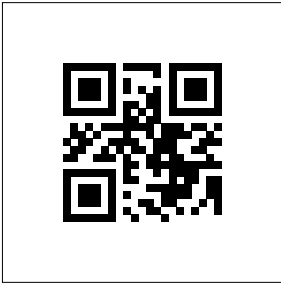

MID:3436665

Machine ID


T1504

Make/Model

FREIGHTLINER CD122084SD



*Latest sample
tracking label*

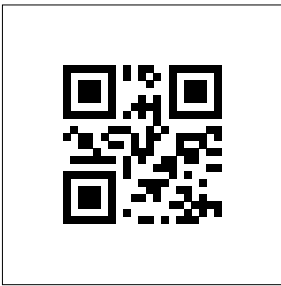

MID:3413983

Machine ID


T1508

Make/Model

KENWORTH T800



*Latest sample
tracking label*

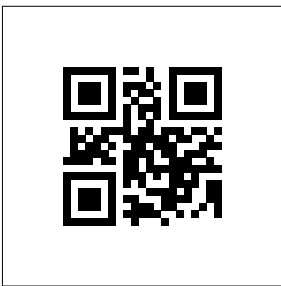

MID:3413984

Machine ID


T1631

Make/Model

KENWORTH T800



*Latest sample
tracking label*

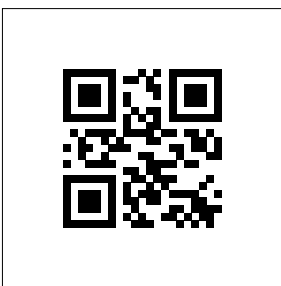

MID:3413985

Machine ID


T1632

Make/Model

KENWORTH T800



*Latest sample
tracking label*

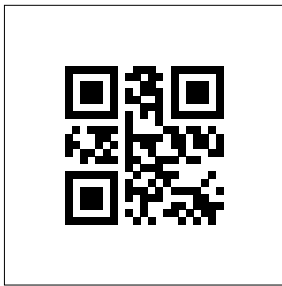

MID:3413986

Machine ID


T1910

Make/Model

KENWORTH T680



*Latest sample
tracking label*

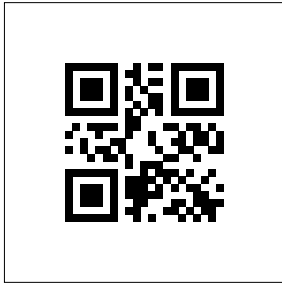

MID:3436667

Machine ID


T1956

Make/Model

FREIGHTLINER CD122084SD



*Latest sample
tracking label*

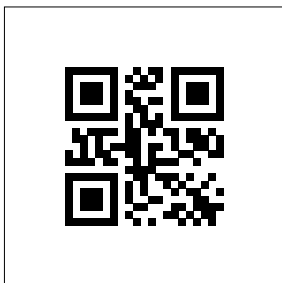

MID:3436668

Machine ID


T1957

Make/Model

FREIGHTLINER CD122084SD



*Latest sample
tracking label*

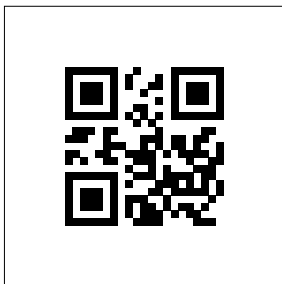

MID:3436669

Machine ID


T1962

Make/Model

PETERBILT 567



*Latest sample
tracking label*

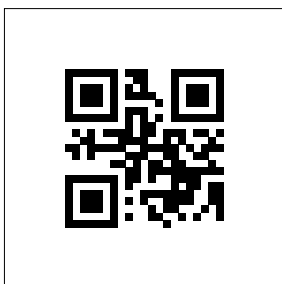

MID:3436670

Machine ID


T1966

Make/Model

INTERNATIONAL HV613



*Latest sample
tracking label*

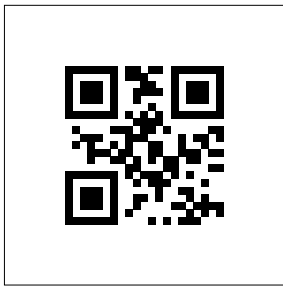


MID:3413987

Machine ID
T2019
Make/Model
Peterbilt 567



*Latest sample
tracking label*

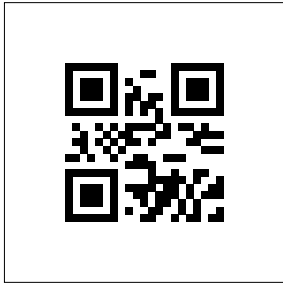


MID:3413989

Machine ID
T2020
Make/Model
Peterbilt 567



*Latest sample
tracking label*

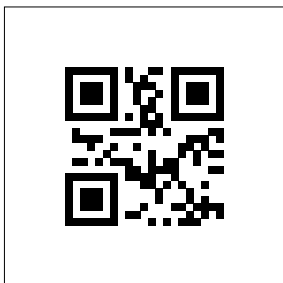


MID:3436671

Machine ID
T2101
Make/Model
PETERBILT 567



*Latest sample
tracking label*

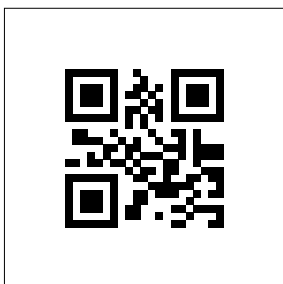


MID:3436672

Machine ID
T2367
Make/Model
FREIGHTLINER FLD120SD



*Latest sample
tracking label*

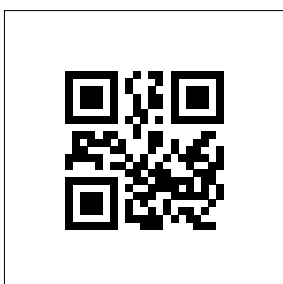


MID:3436673

Machine ID
T2368
Make/Model
FREIGHTLINER FLD120SD




*Latest sample
tracking label*

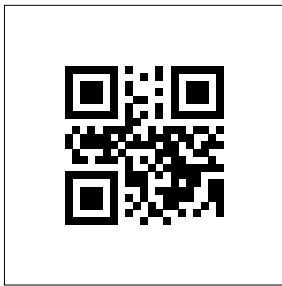

Machine ID
T4310
Make/Model
KENWORTH T800




MID:3436674

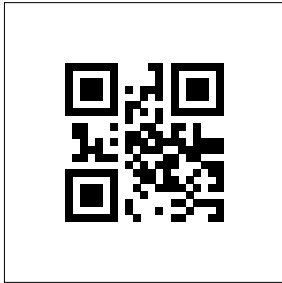

Machine ID
T4312
Make/Model
Kenworth T800




MID:3413991

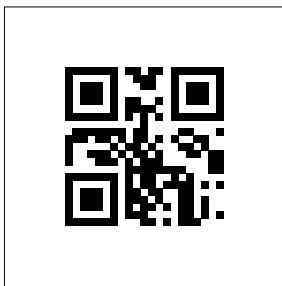

Machine ID
T4313
Make/Model
Kenworth T800




MID:3413993

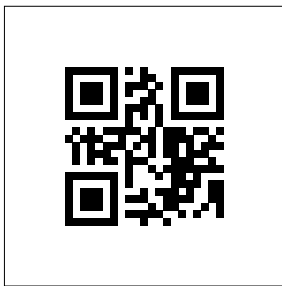

Machine ID
T4317
Make/Model
Kenworth T800




MID:3413995

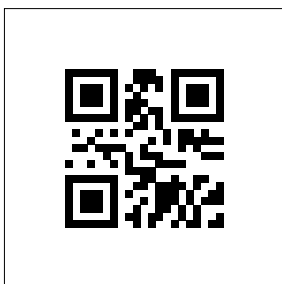

Machine ID
T4318
Make/Model
Kenworth T800



MID:3413997

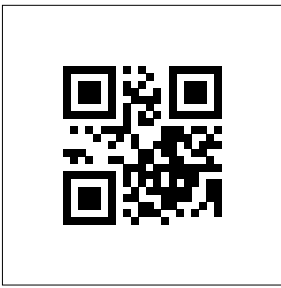

MID:3436675

Machine ID

T4356

Make/Model

FREIGHTLINER CD122084SD



*Latest sample
tracking label*



MID:3436676

Machine ID


T4357

Make/Model

FREIGHTLINER CD122084SD



*Latest sample
tracking label*

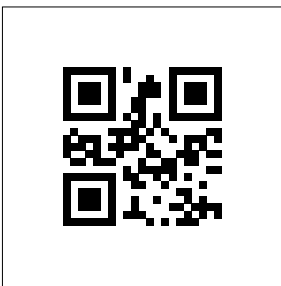

MID:3413998

Machine ID


T5712

Make/Model

Kenworth T800



*Latest sample
tracking label*

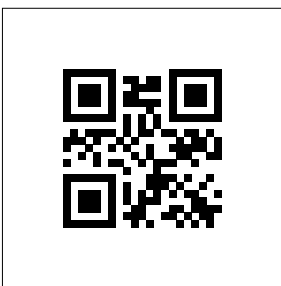

MID:3436677

Machine ID


T6883

Make/Model

FREIGHTLINER FLD120SD



*Latest sample
tracking label*

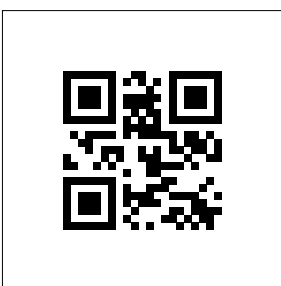

MID:3414000

Machine ID


T8352

Make/Model

Kenworth T800




*Latest sample
tracking label*

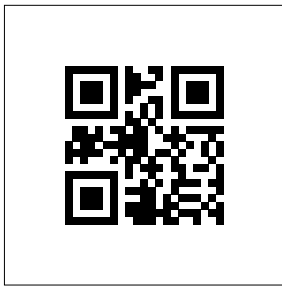

Machine ID
T8353
Make/Model
Kenworth T800




MID:3414001

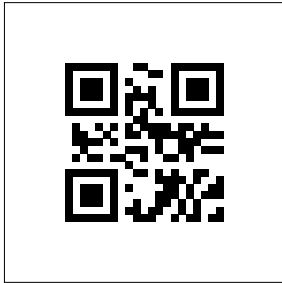

Machine ID
T8354
Make/Model
Kenworth T800




MID:3414002

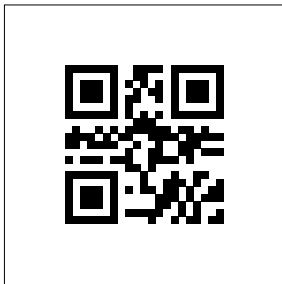

Machine ID
T8362
Make/Model
Kenworth T800



MID:3414004

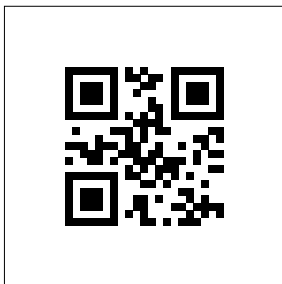

Machine ID
T8364
Make/Model
Kenworth T660



MID:3414005