

### Download the App



<https://bit.ly/oilapp>



<https://bit.ly/oaplay>

Download the Oil Analysis app from the App Store or Google Play. After installation, use your WebCheck credentials to login to the app.

### Take your oil samples



1

Remove the sample label from the sample form and stick to the sample bottle.



2

Take the oil sample as you normally would and re-cap the sample bottle.



3

Ensure that the cap is securely tightened and wipe any excess oil from the sample bottle.

### Complete sample submission with the asset tag booklet & the app



4

Using the app, scan the QR code of the machine the sample was taken from. Remove the tracking label from the sample form and stick to the asset log booklet.



5

Next, scan the sample label, and complete the sample information and submit the sample.



1

Login to the app using your WebCheck credentials. The app will cache your machines.



2

Once logged in, click on the "Scan QR Code" button.



3

Locate the machine that was sampled in the asset tag booklet and scan that QR code.



4

The asset is selected & sample submission screen is loaded. Click the "Scan" button.



5

Scan the sample bottle label from your oil sample for the selected machine.



6

The sample is now linked to the machine. Use the "SIMPLE" data entry mode to add info.



7

Select the sample date, take any pictures you want, add a comment if desired, then click the "submit sample" button




8

The sample info has been submitted to the laboratory where the QR code will be scanned, and the sample information automatically retrieved.



9

Submitted samples are listed. To update a samples info slide left. To delete a sample slide right.

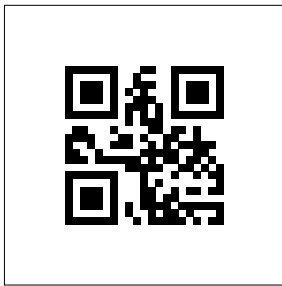


EID:25861

Area  
**6 Calender Line**  
Machine ID  
**39-0034 South Cooling Mixer**  
Component  
**Gearbox**  
Make/Model  
**THYSSEN TYPE MHV 360**



*Latest sample tracking label*

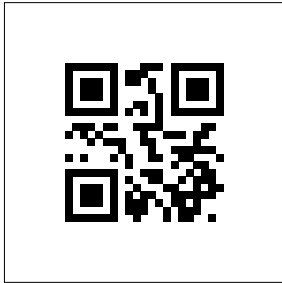


EID:715109

Area  
**6 Calender Line**  
Machine ID  
**39-0036 North Cooling Mixer**  
Component  
**Gearbox**  
Make/Model  
**THYSSEN TYPE MHV 360**



*Latest sample tracking label*

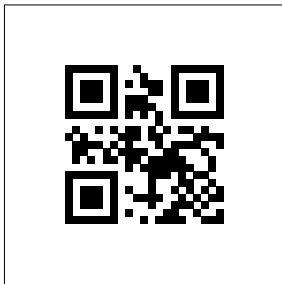


EID:715243

Area  
**6 Calender Line**  
Machine ID  
**39-0185 Banbury**  
Component  
**Gearbox**  
Make/Model



*Latest sample tracking label*

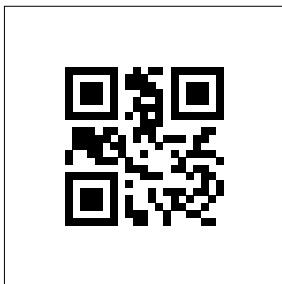


EID:25868

Area  
**6 Calender Line**  
Machine ID  
**39-0209 South PGE**  
Component  
**Gearbox**  
Make/Model  
**FLENDER BOCHOLT K36825**



*Latest sample tracking label*

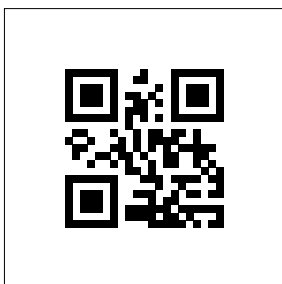


EID:25867

Area  
**6 Calender Line**  
Machine ID  
**39-0232 North PGE**  
Component  
**Gearbox**  
Make/Model  
**FLENDER K36825**



*Latest sample tracking label*

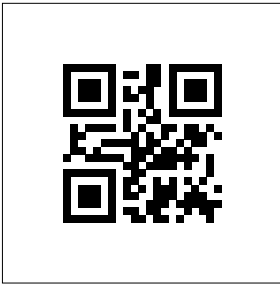


EID:25856

Area  
**6 Calender Line**  
Machine ID  
**39-0255 CGT mill**  
Component  
**Gearbox**  
Make/Model  
**HORSBURGH + SCOTT T1333**



*Latest sample  
tracking label*

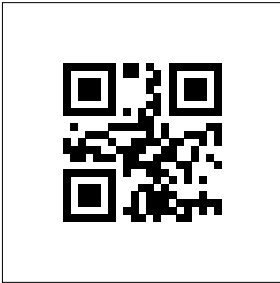

EID:25863

Area  
**6 Calender Line**  
Machine ID  
**39-0290 HB mill**  
Component  
**Gearbox**  
Make/Model  
**DORSTENER 400-W700**



*Latest sample  
tracking label*




EID:25872

Area  
**6 Calender Line**  
Machine ID  
**39-0313 Strainer**  
Component  
**Gearbox**  
Make/Model  
**BERSTORFF KE 300X6D**



*Latest sample  
tracking label*

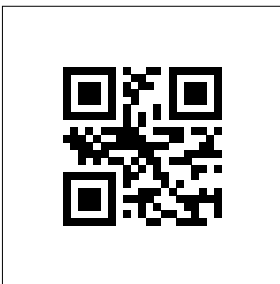

EID:715343

Area  
**6 Calender Line**  
Machine ID  
**39-0419 Calender**  
Component  
**Gearbox**  
Make/Model  
**DORSTENER 400W-700**



*Latest sample  
tracking label*