

Download the App



<https://bit.ly/oilapp>



<https://bit.ly/oaplay>

Download the Oil Analysis app from the App Store or Google Play. After installation, use your WebCheck credentials to login to the app.

Take your oil samples



1

Remove the sample label from the sample form and stick to the sample bottle.



2

Take the oil sample as you normally would and re-cap the sample bottle.



3

Ensure that the cap is securely tightened and wipe any excess oil from the sample bottle.

Complete sample submission with the asset tag booklet & the app




4

Using the app, scan the QR code of the machine the sample was taken from. Remove the tracking label from the sample form and stick to the asset log booklet.



5

Next, scan the sample label, and complete the sample information and submit the sample.

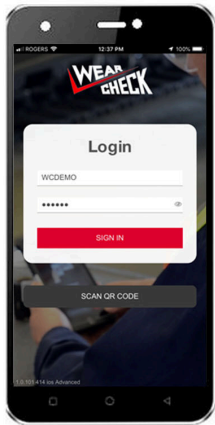

1

Login to the app using your WebCheck credentials. The app will cache your machines.



2

Once logged in, click on the "Scan QR Code" button.



3

Locate the machine that was sampled in the asset tag booklet and scan that QR code.




4

The asset is selected & sample submission screen is loaded. Click the "Scan" button.




5

Scan the sample bottle label from your oil sample for the selected machine.

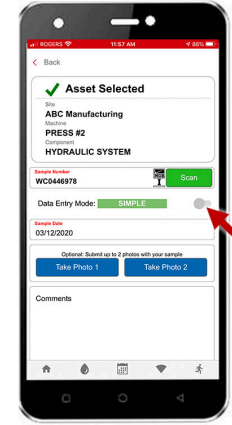


6

The sample is now linked to the machine. Use the "SIMPLE" data entry mode to add info.

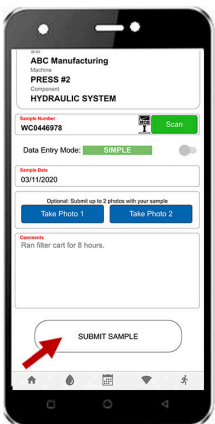

7

Select the sample date, take any pictures you want, add a comment if desired, then click the "submit sample" button

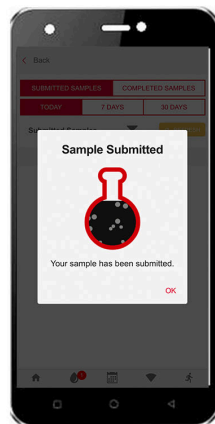

8

The sample info has been submitted to the laboratory where the QR code will be scanned, and the sample information automatically retrieved.




9

Submitted samples are listed. To update a samples info slide left. To delete a sample slide right.

{unassigned}

OIL GEAR PVWH PHRBP (S/N 15SAYCNSN) to

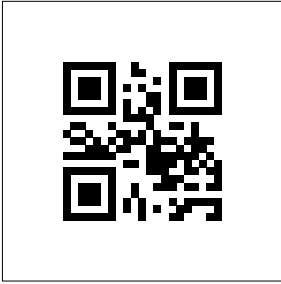

EID:4187068

PHRBP

Bulk Fluid Tank

Oil Gear PVWH 15LSAYCN

15SAYCNSN

Reservoir Red Oil

{unassigned}

2190S Red Oil

NOT GIVEN (110 GAL)



*Latest sample
tracking label*