

Download the App










https://bit.ly/oilapp

https://bit.ly/oaplay

Download the Oil Analysis app from the App Store or Google Play. After installation, use your WebCheck credentials to login to the app.

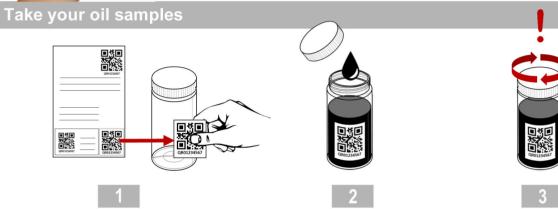

Remove the sample label from the sample form and stick to the sample bottle. Take the oil sample as you normally would and re-cap the sample bottle.

Ensure that the cap is securely tightened and wipe any excess oil from the sample bottle.

Complete sample submission with the asset tag booklet & the app



Using the app, scan the QR code of the machine the sample was taken from. Remove the tracking label from the sample form and stick to the asset log booklet.

Next, scan the sample label, and complete the sample information and submit the sample.

Asset Tag Booklet Page 1 of 3





Login to the app using your WebCheck credentials. The app will cache your machines.



The asset is selected & sample submission screen is loaded. Click the "Scan" button.



Select the sample date, take any pictures you want, add a comment ifdesired, then click the "submit sample" button



Once logged in, click on the "Scan QR Code" button.



Scan the sample bottle label from your oil sample for the selected machine.



The sample info has been submitted to the laboratory where the QR code will be scanned, and the sample information automatically retrieved.



Locate the machine that was sampled in the asset tag booklet and scan that QR code.



The sample is now linked to the machine. Use the "SIMPLE" data entry mode to add info.



Submitted samples are listed. To update a samples info slide left. To delete a sample slide right.

Asset Tag Booklet

{unassigned} AAC-7 to AC-173



Area

{unassigned}

Machine ID

AAC-7

Component

Diesel Engine

Make/Model

EID:2104835

Latest sample tracking label



Area

{unassigned}

Machine ID

AC-173

Component

Diesel Engine

Make/Model

EID:3192140

Latest sample tracking label

Asset Tag Booklet Page 3 of 3