

Download the App









https://bit.ly/oaplay

Download the Oil Analysis app from the App Store or Google Play. After installation, use your WebCheck credentials to login to the app.

Take your oil samples



Remove the sample label from the sample form and stick to the sample bottle.

Take the oil sample as you normally would and re-cap the sample bottle. Ensure that the cap is securely tightened and wipe any excess oil from the sample bottle.


Complete sample submission with the asset tag booklet & the app



Using the app, scan the QR code of the machine the sample was taken from. Remove the tracking label from the sample form and stick to the asset log booklet.

Next, scan the sample label, and complete the sample information and submit the sample.



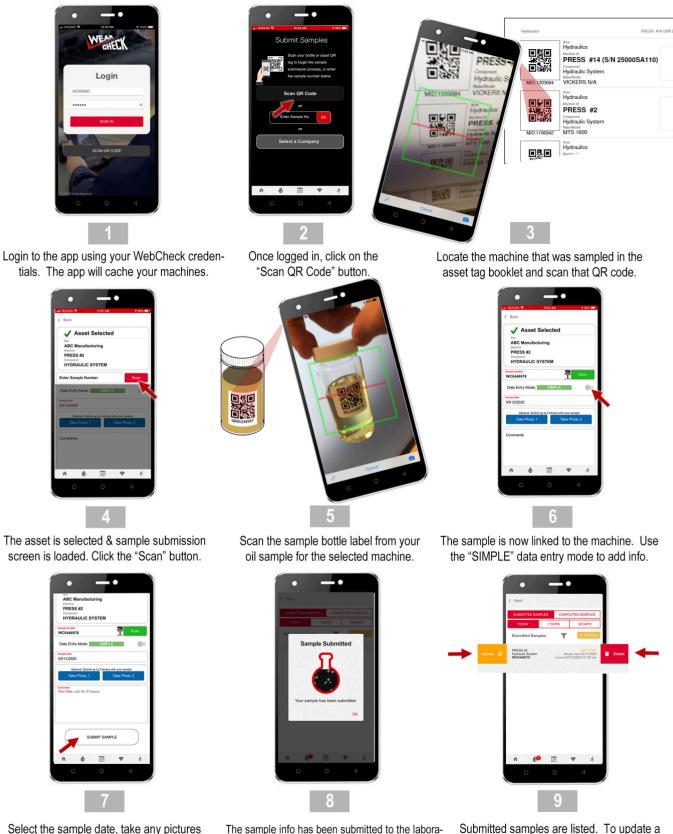

you want, add a comment ifdesired, then click the "submit sample" button

Asset Tag Booklet

The sample info has been submitted to the laboratory where the QR code will be scanned, and the sample information automatically retrieved.

Submitted samples are listed. To update a samples info slide left. To delete a sample slide right.

	Area L-13 Machine ID 113 - DRY CAN Component Gearbox Make/Model	Latest sample tracking label
EID:3139879	,	·