

PROBLEM SUMMARY

Machine Id **5178188 (S/N 1045)**


Component

Compressor

KAESER SIGMA (OEM) M-460 (--- QTS)

Sample Rating Trend ISO

COMPONENT CONDITION SUMMARY

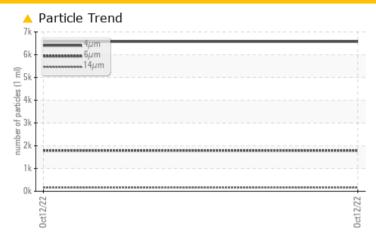

RECOMMENDATION

Oil and filter change at the time of sampling has been noted. No corrective action is recommended at this time. Resample at the next service interval to monitor.

PROBLEMATIC TEST RESULTS									
Sample Status			ABNORMAL						
Particles >6µm	ASTM D7647	>1300	1789						
Particles >14µm	ASTM D7647	>80	<u> </u>						
Particles >21µm	ASTM D7647	>20	41						
Particles >38μm	ASTM D7647	>4	<u> </u>						
Oil Cleanliness	ISO 4406 (c)	>/17/13	20/18/15						

Customer Id: MICWINCA Sample No.: KCP46662D Lab Number: 05675669 Test Package: IND 2

To manage this report scan the QR code

To discuss the diagnosis or test data:

Don Baldridge +1 don.b505@comcast.net

To change component or sample information: Customer Service +1 1-800-237-1369 customerservice@wearcheck.com

RECOMMENDED ACTIONS							
Action	Status	Date	Done By	Description			
Change Fluid			?	Oil and filter change at the time of sampling has been noted.			
Change Filter			?	Oil and filter change at the time of sampling has been noted.			

HISTORICAL DIAGNOSIS




OIL ANALYSIS REPORT

5178188 (S/N 1045)

Component

Compressor

KAESER SIGMA (OEM) M-460 (--- QTS)

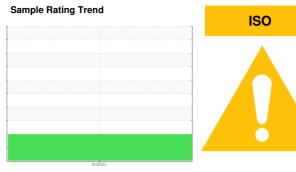

DIAGNOSIS

Recommendation

Oil and filter change at the time of sampling has been noted. No corrective action is recommended at this time. Resample at the next service interval to monitor.

Wear

All component wear rates are normal.

Contamination

There is a high amount of particulates present in the oil.


Fluid Condition

The AN level is acceptable for this fluid. The condition of the oil is suitable for further service.

				Oct2022	<u> </u>	
SAMPLE INFORM	MATION	method	limit/base	current	history1	history2
Sample Number		Client Info		KCP46662D		
Sample Date		Client Info		12 Oct 2022		
Machine Age	hrs	Client Info		15169		
Oil Age	hrs	Client Info		2926		
Oil Changed		Client Info		Changed		
Sample Status				ABNORMAL		
WEAR METALS		method	limit/base	current	history1	history2
Iron	ppm	ASTM D5185m	>50	0		
Chromium	ppm	ASTM D5185m	>10	0		
Nickel	ppm	ASTM D5185m	>3	0		
Titanium	ppm	ASTM D5185m	>3	0		
Silver	ppm	ASTM D5185m	>2	0		
Aluminum	ppm	ASTM D5185m	>10	<1		
Lead	ppm	ASTM D5185m	>10	0		
Copper	ppm	ASTM D5185m	>50	2		
Tin	ppm	ASTM D5185m	>10	<1		
Vanadium	ppm	ASTM D5185m		0		
Cadmium	ppm	ASTM D5185m		0		
ADDITIVES		method	limit/base	current	history1	history2
Boron	ppm	ASTM D5185m	0	0		
Barium	ppm	ASTM D5185m	90	0		
Molybdenum	ppm	ASTM D5185m	0	0		
Manganese	ppm	ASTM D5185m		<1		
Magnesium	ppm	ASTM D5185m	100	31		
Calcium	ppm	ASTM D5185m	0	0		
Phosphorus	ppm	ASTM D5185m	0	0		
Zinc	ppm	ASTM D5185m	0	26		
Sulfur	ppm	ASTM D5185m	23500	22397		
CONTAMINANTS		method	limit/base	current	history1	history2
Silicon	ppm	ASTM D5185m	>25	2		
Sodium	ppm	ASTM D5185m		6		
Potassium	ppm	ASTM D5185m	>20	3		
Water	%	ASTM D6304	>0.05	0.025		
ppm Water	ppm	ASTM D6304	>500	259.9		
FLUID CLEANLIN	IESS	method	limit/base	current	history1	history2
Particles >4µm		ASTM D7647		6572		
Particles >6µm		ASTM D7647	>1300	1789		
Particles >14µm		ASTM D7647	>80	161		
Particles >21µm		ASTM D7647	>20	<u></u> 41		
Particles >38µm		ASTM D7647	>4	<u>^</u> 5		
Particles >71µm		ASTM D7647	>3	1		
Oil Cleanliness		ISO 4406 (c)	>/17/13	20/18/15		
FLUID DEGRADA	TION	method	limit/base	current	history1	history2
Acid Number (AN)	mg KOH/g	ASTM D8045	1.0	0.40		



OIL ANALYSIS REPORT

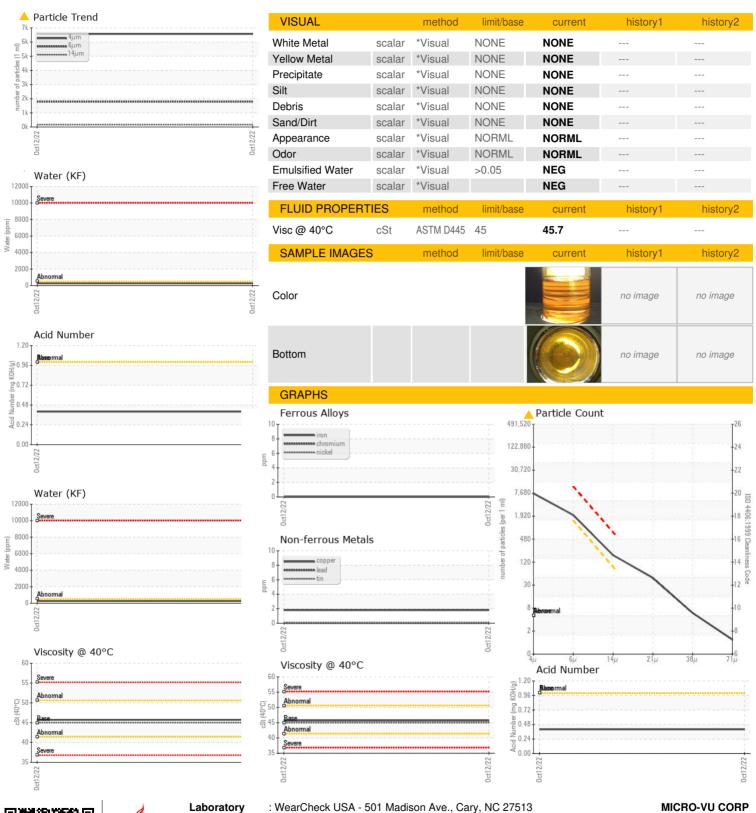



Certificate L2367

Laboratory Sample No. Lab Number **Unique Number**

: KCP46662D : 05675669 : 10190240

Received : 25 Oct 2022 Diagnosed : 27 Oct 2022

Diagnostician : Don Baldridge Test Package : IND 2 (Additional Tests: KF, PrtCount) To discuss this sample report, contact Customer Service at 1-800-237-1369.

* - Denotes test methods that are outside of the ISO 17025 scope of accreditation. Statements of conformity to specifications are based on the simple acceptance decision rule (JCGM 106:2012) 7909 CONDE LN WINDSOR, CA US 95492

Contact: IAN DAVISON

iandavison@microvu.com T:

F: