



# **PROBLEM SUMMARY**

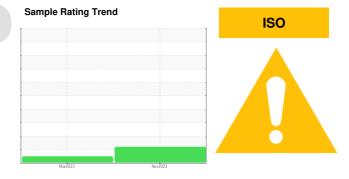

# Machine Id 6740840 (S/N 1071) Component

Compressor Fluid KAESER SIGMA (OEM) M-460 (--- GAL)

# COMPONENT CONDITION SUMMARY

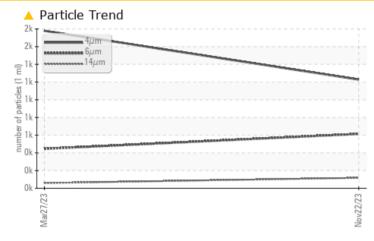

# RECOMMENDATION

No corrective action is recommended at this time. The filter change at the time of sampling has been noted. Resample at the next service interval to monitor.

PROBLEMATIC TEST RESULTS									
Sample Status			ATTENTION	NORMAL					
Particles >14µm	ASTM D7647	>80	<u> </u>	59					
Particles >21µm	ASTM D7647	>20	<mark>/</mark> 36	17					
Oil Cleanliness	ISO 4406 (c)	>/17/13	<u> </u>	18/16/13					

Customer Id: KINMOD Sample No.: KCPA010779 Lab Number: 06025745 Test Package: IND 2



To manage this report scan the QR code

*To discuss the diagnosis or test data:* Don Baldridge +1 <u>don.b505@comcast.net</u>

To change component or sample information: Customer Service +1 1-800-237-1369 customerservice@wearcheck.com There are no recommended actions for this sample.

#### HISTORICAL DIAGNOSIS

# 27 Mar 2023 Diag: Don Baldridge



Resample at the next service interval to monitor.All component wear rates are normal. The amount and size of particulates present in the system are acceptable. There is no indication of any contamination in the oil. The AN level is acceptable for this fluid. The condition of the oil is suitable for further service.





# **OIL ANALYSIS REPORT**

SAMPLE INCODMATION

#### Sample Rating Trend

ISO

#### Machine Id 6740840 (S/N 1071) Component

Compressor Fluid KAESER SIGMA (OEM) M-460 (--- GAL)

### DIAGNOSIS

#### Recommendation

No corrective action is recommended at this time. The filter change at the time of sampling has been noted. Resample at the next service interval to monitor.

# Wear

All component wear rates are normal.

### Contamination

There is a moderate amount of particulates present in the oil.

#### Fluid Condition


The AN level is acceptable for this fluid. The condition of the oil is suitable for further service.


SAMPLE INFORM	IATION	method	limit/base	current	history1	history2
Sample Number		Client Info		KCPA010779	KCP46375	
Sample Date		Client Info		22 Nov 2023	27 Mar 2023	
Machine Age	hrs	Client Info		22389	18263	
Oil Age	hrs	Client Info		0	0	
Oil Changed		Client Info		N/A	Changed	
Sample Status				ATTENTION	NORMAL	
WEAR METALS		method	limit/base	current	history1	history2
Iron	ppm	ASTM D5185m	>50	0	0	
Chromium	ppm	ASTM D5185m	>10	0	0	
Nickel	ppm	ASTM D5185m	>3	0	0	
Titanium	ppm	ASTM D5185m	>3	0	0	
Silver	ppm	ASTM D5185m	>2	0	0	
Aluminum	ppm	ASTM D5185m	>10	0	<1	
Lead	ppm	ASTM D5185m	>10	0	0	
Copper	ppm	ASTM D5185m	>50	1	<1	
Tin	ppm	ASTM D5185m	>10	0	0	
Vanadium	ppm	ASTM D5185m		0	0	
Cadmium	ppm	ASTM D5185m		0	0	
ADDITIVES		method	limit/base	current	history1	history2
Boron	ppm	ASTM D5185m	0	0	0	
Barium	ppm	ASTM D5185m	90	0	0	
Molybdenum	ppm	ASTM D5185m	0	0	0	
Manganese	ppm	ASTM D5185m		<1	<1	
Magnesium	ppm	ASTM D5185m	100	0	26	
Calcium	ppm	ASTM D5185m	0	0	0	
Phosphorus	ppm	ASTM D5185m	0	2	5	
Zinc	ppm	ASTM D5185m	0	0	12	
Sulfur	ppm	ASTM D5185m	23500	18714	22734	
CONTAMINANTS		method	limit/base	current	history1	history2
Silicon	ppm	ASTM D5185m	>25	0	<1	
Sodium	ppm	ASTM D5185m		1	5	
Potassium	ppm	ASTM D5185m	>20	0	<1	
Water	%	ASTM D6304	>0.05	0.008	0.009	
ppm Water	ppm	ASTM D6304	>500	82	92.6	
FLUID CLEANLIN	ESS	method	limit/base	current	history1	history2
Particles >4µm		ASTM D7647		1228	1779	
Particles >6µm		ASTM D7647	>1300	614	446	
Particles >14µm		ASTM D7647	>80	<b>118</b>	59	
Particles >21µm		ASTM D7647	>20	<mark>/</mark> 36	17	
Particles >38µm		ASTM D7647	>4	1	3	
Particles >71µm		ASTM D7647	>3	0	0	
Oil Cleanliness		ISO 4406 (c)	>/17/13	<b>17/16/14</b>	18/16/13	
FLUID DEGRADA	TION	method	limit/base	current	history1	history2
Acid Number (AN)	mg KOH/g	ASTM D8045	1.0	0.45	0.46	


Contact/Location: JESSIE HUPE - KINMOD




# **OIL ANALYSIS REPORT**

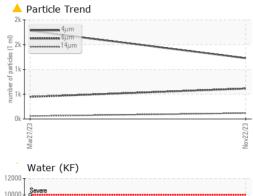

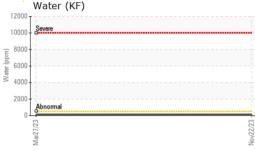

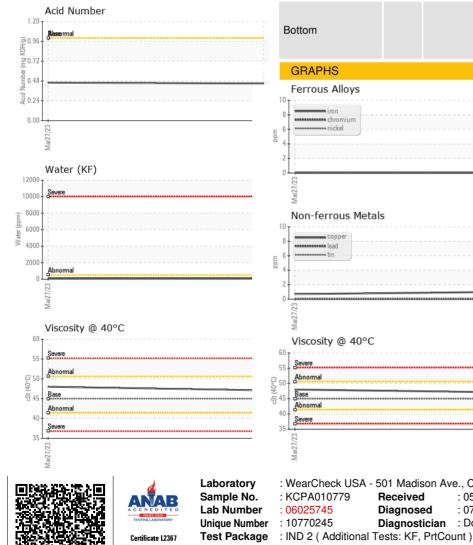

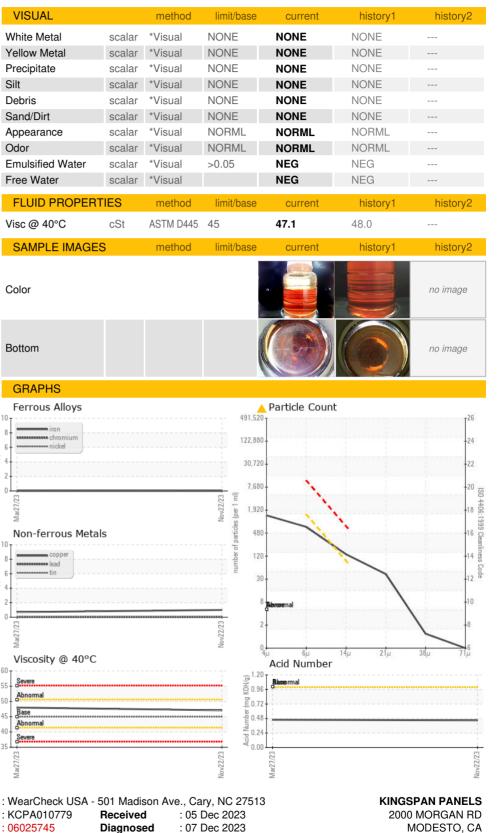

To discuss this sample report, contact Customer Service at 1-800-237-1369. \* - Denotes test methods that are outside of the ISO 17025 scope of accreditation.

Statements of conformity to specifications are based on the simple acceptance decision rule (JCGM 106:2012)

Diagnostician : Don Baldridge

Contact: JESSIE HUPE

jessie.hupe@kingspan.com

US 95358

T: